 
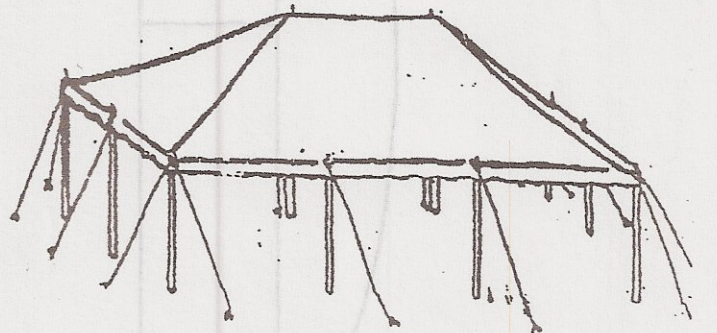 
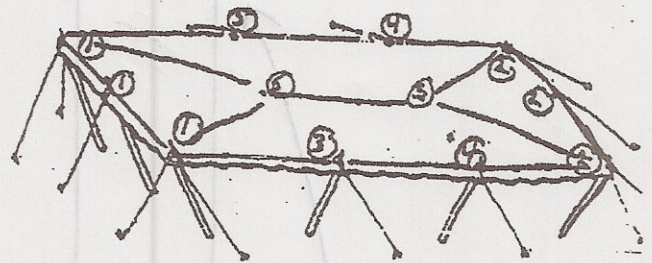 


Party Canopy Tent Instructions

20'x30' or 20'x40'

1. SPREAD OUT TENT AND ROPES. DRIVE STAKES 3FT. OUT FROM EDGE OF TENT. TWO AT EACH CORNER, ONE AT EACH SIDE POLE POSITION.
2. FASTEN ROPES TO STAKES LEAVING LOOPED END AND ABOUT 7FT OF SLACK.
3. SET UP 2 PIECE SIDE POLES WITH TIPS THROUGH GROMMETS. ANGLE POLES AT ABOUT 45 DEGREES.
4. SET UP CENTER POLES (LARGER DIAMETER 4 PIECE) BE CERTAIN SNAP BUTTONS ARE SECURED.
5. PUSH SIDE POLES TO VERTICAL POSITION. ADJUST AND TIGHTEN GUY ROPES.
6. SMALL DIAMETER CORD IS ATTACHED TO CENTER RINGS AND STAKED STRAIGHT DOWN.

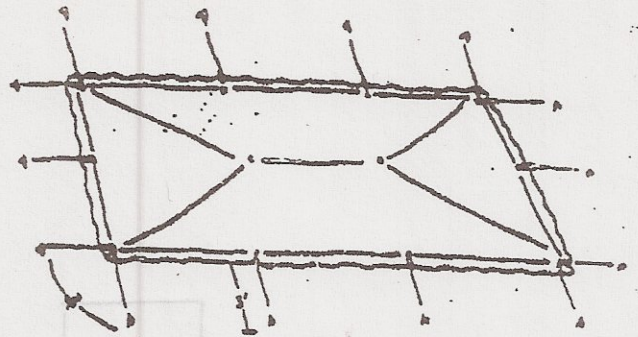

PARTS LIST
2-3 CENTER POLES
12 SIDE POLES
14-18 STAKES
14-18 ROPES W/ SLIDERS

IF YOU HAVE ANY QUESTIONS, PLEASE CALL 304-255-1695. THANKS AGAIN FOR CHOOSING PARTY KING RENTALS & SALES.

2019 107E 2019 107E 2019 107E